




When measuring radii use the greatest possible arc to reduce measuring uncertainty

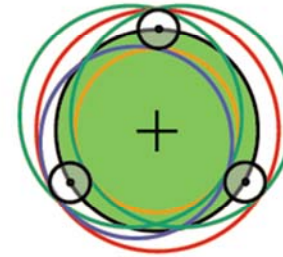


○ Probing Error (Strongly Magnified)

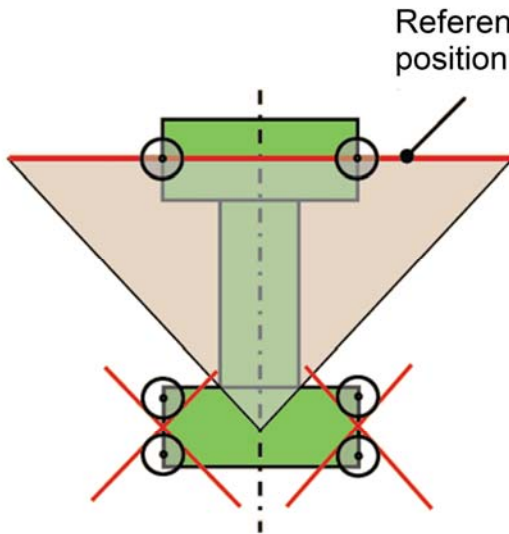

Unfavorable point locations lead to poor measuring performance

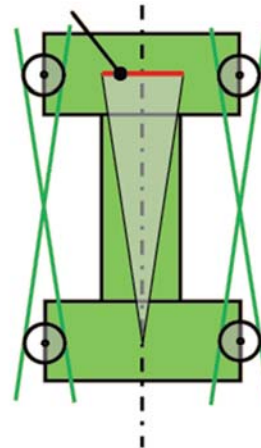

When possible, use many points over a large portion of the feature

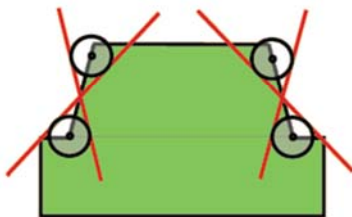

When measuring planes and faces, use the full extents of the geometry

